53.0 Qts.
Portable Party Cooler

User's Manual

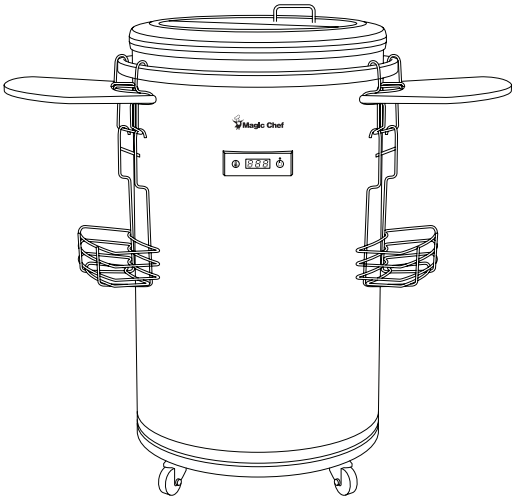

Model MCSPC50S / MCSPC50W

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING YOUR PARTY COOLER AND KEEP IT FOR FUTURE REFERENCE.

PRODUCT REGISTRATION

Thank you for purchasing a Magic Chef® product. The first step to protect your new product is to complete the product registration on our website: www.mcappliance.com/register. The benefits of registering your product include the following:

1. Registering your product will allow us to contact you regarding a safety notification or product update.
2. Registering your product will allow for more efficient warranty service processing when warranty service is required.
3. Registering your product could act as your proof of purchase in the event of insurance loss.

Once again, thank you for purchasing a Magic Chef® product.

TABLE OF CONTENTS

Product Registration 02
Important Safeguards 04
Important Safety Precautions 05
Parts and Features 06
Operation 07
Care and Maintenance 08
Limited Warranty 09

IMPORTANT SAFEGUARDS

⚠ WARNING

Read and understand all safety precautions. Failure to follow all instructions described in this manual may result in electric shock, fire and/or serious personal injury. The warnings, cautions and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. It must be understood by the user that common sense and caution are attributes which cannot be built into the appliance, but must be supplied by the user.

Electric Power

If an electrical circuit is overloaded with other appliances, the party cooler may not operate properly. The party cooler should be operated on a separate electrical circuit from other operating appliances.

3-Prong Plug

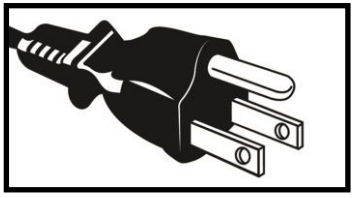

This appliance must be grounded. In the event of an electrical short circuit, the grounding plug reduces the risk of electric shock by providing an escape wire for electric current. This appliance is equipped with a power cord that has a grounding wire with a grounding plug. The plug must be plugged into an electrical outlet that is properly installed and grounded. This appliance requires a 115 Volt, 60 Hz electrical outlet with a 3-prong ground receptacle. Improper use of the grounding plug and/or outlet can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood.

⚠ CAUTION

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance. DO NOT alter the plug of the appliance or any extension cord used with this appliance. Arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled.

IMPORTANT SAFEGUARDS

⚠ WARNING

DANGER: Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not puncture refrigerant tubing.

⚠ CAUTION

CAUTION: Risk of fire or explosion. Flammable refrigerant used. Consult repair manual/owner's guide before attempting to service this product. All safety precautions must be followed.

CAUTION: Risk of fire or explosion. Dispose of properly in accordance with federal or local regulations. Flammable refrigerant used.

CAUTION: Risk of fire or explosion due to puncture of refrigerant tubing; follow handling instructions carefully. Flammable refrigerant used.

IMPORTANT SAFETY PRECAUTIONS

When using your party cooler, basic safety precautions should be observed, including the following:

This unit is not meant for ice to be added as the melting of ice may cause damage to the internal components.

1. Read all instructions before using the party cooler.
2. For household use only.
3. DO NOT turn the appliance on unless it is properly assembled.
4. DO NOT unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
5. DO NOT operate the appliance if it has a damaged or cut power cord or plug, if wires are exposed, if it malfunctions or if it has been dropped or damaged in any manner. DO NOT attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing. Contact the nearest authorized service facility for examination, repair, or adjustment.
6. The appliance must be unplugged prior to cleaning.
7. DO NOT operate the appliance in the presence of explosive fumes.
8. DO NOT use the appliance in the immediate vicinity of a bath, shower, or swimming pool.
9. Prior to storing or discarding the appliance, remove the lid and leave the shelves in place. Doing so reduces the risk to child safety.
10. DO NOT place this appliance directly under the sun or rain. DO NOT use the appliance outdoors for a prolonged period of time. Store the appliance indoors when not in use.
11. To avoid an imbalance, DO NOT place heavy objects near the center of the serving table.
12. Only operate the appliance on a level and stable surface. Avoid tilting the appliance. If the appliance must be tilted during handling, allow it to sit in an upright position 20-30 minutes prior to plugging it in and starting the cooling of the storage compartment.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

PARTS AND FEATURES

Unit

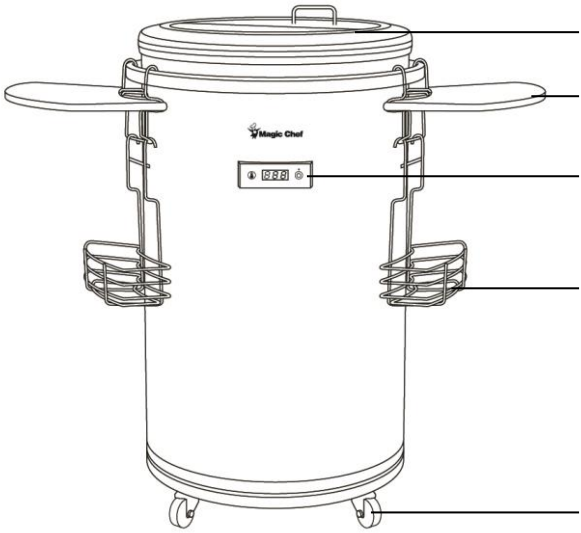

Specifications

Models	MCSPC50S (Stainless Steel), MCSPC50W (White)
Capacity	46 12-oz. Cans with Baskets, 60 Cans Without Baskets | 53 Quarts
Power Supply	115 V, 60 Hz
Temperature Range	32°F - 61°F
Standby Cooling Time	5-10 Hours
Dimensions	20” Diameter / 33.5” Height
Weight	52.9 Lbs.

OPERATION

It is recommended to clean the interior of the appliance with lukewarm water and a mild detergent prior to use. Dry thoroughly.

1. Insert the plug into the wall outlet.
2. Press the power button to the right of the digital display to turn the cooler on.
3. Press the temperature button to the left of the digital display to set your desired temperature. The display will flash during the adjustment. During normal use, the display will show the average temperature inside of the cooler.

Suggested Temperature Control	
Beer & Soda	39°F
White Wine	45°F - 50°F
Red Wine	55°F - 61°F

The length of time it takes the appliance to reach the desired temperature may vary; the temperature of the appliance depends on the following:

a. The temperature of the surrounding area
b. How often (frequency) and how long (duration) the lid is open
c. The cooler's contents

The following instructions can increase the cooling function of this product:

a. When using the appliance for the first time, allow the unit to operate continuously for 12-18 hours.
b. Alternate the racks within the cooler in 6 hour intervals to improve cooling.
c. Increase the amount of space between items placed in the cooler in order for the items to properly cool.

CARE AND MAINTENANCE

⚠ WARNING

To avoid electric shock, always unplug the appliance before cleaning or moving. Disregarding this warning may result in personal injury.

Note: DO NOT use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents, or metal scouring pads to clean the appliance; some of these chemicals may dissolve, damage, and/or discolor your appliance.

1. Remove the contents of the appliance.
2. Wipe the interior and exterior surfaces with a damp cloth. Add vinegar to the water to prevent mold and fungus growth.
3. Take the lid apart and clean it. The detachable bottom and lid parts may be cleaned with lukewarm water and detergent.
4. Dry all parts thoroughly after cleaning.
5. When reassembling the lid, turn the slits in the sealing ring and in the hinge rubber strip downward.
6. When not in use, the appliance must be completely dry to prevent the growth of mold. If possible, leave the lid open.

LIMITED WARRANTY

MC Appliance Corporation warrants each new Party Cooler to be free from defects in material and workmanship and agrees to remedy any such defect or to furnish a new part(s) (at the company's option) for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for a period of one year after the date of purchase. A copy of the dated sales receipt/invoice is required to receive warranty service, replacement or refund.

In addition, MC Appliance Corporation warrants the compressor (parts only) to be free from defects in material and workmanship for a period of five years. The consumer is responsible for all labor and transportation expenses related to the diagnosis and replacement of the compressor after the initial one-year warranty expires. In the event that the unit requires replacement or refund under the terms of this warranty, the consumer is responsible for all transportation expenses to return the unit to our factory prior to receiving a replacement unit or refund. A refund or replacement will be issued at the discretion of MC Appliance Corporation.

This warranty covers appliances in use within the contiguous United States, Alaska, Hawaii, and Puerto Rico. The warranty does not cover the following:

- Damages due to shipping damage or improper installation
- Damages due to misuse or abuse
- Content losses due to failure of the unit
- Punctures to the evaporator system due to improper defrosting of the unit
- Repairs performed by unauthorized service agents
- Service calls that do not involve defects in material and workmanship, such as instruction on proper use of the product or improper installation
- Replacement or resetting of house fuses or circuit breakers
- Failure of this product if used for purposes other than its intended purpose
- Disposal costs for any failed unit(s) not returned to our factory
- Any delivery or installation costs incurred as the result of a unit that fails to perform as specified
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an authorized service technician is not available
- The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions
- Refunds for non-repairable products are limited to the price paid for the unit per the sales receipt
- This warranty is non-transferable. This warranty applies only to the original purchaser and does not extend to any subsequent owner(s)

LIMITED WARRANTY

LIMITATIONS OF REMEDIES AND EXCLUSIONS

Product repair in accordance with the terms herein, is your sole and exclusive remedy under this limited warranty. Any and all implied warranties including merchantability and fitness for a particular purpose are hereby limited to one year or the shortest period allowed by law. MC Appliance Corporation is not liable for incidental or consequential damages and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without the prior written consent of MC Appliance Corporation.

Some states prohibit the exclusion or limitation of incidental or consequential damages, or limitations on implied warranties. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

Models	Parts & Labor	Compressor (Parts Only)	Type of Service
MCSPC50S	One Year	Five Years	Carry In
MCSPC50W			

For Service or Assistance, please call **888-775-0202**. Or visit us on the web at **www.mcappliance.com** to request warranty service or order parts.

CNA International, Inc. d/b/a MC Appliance Corporation. All rights reserved.
Magic Chef® logo is a registered trademark of CNA International, Inc.

www.mcappliance.com **Printed in China**